


# GR200 Bulldog Double Door Lock Fitting Instructions.

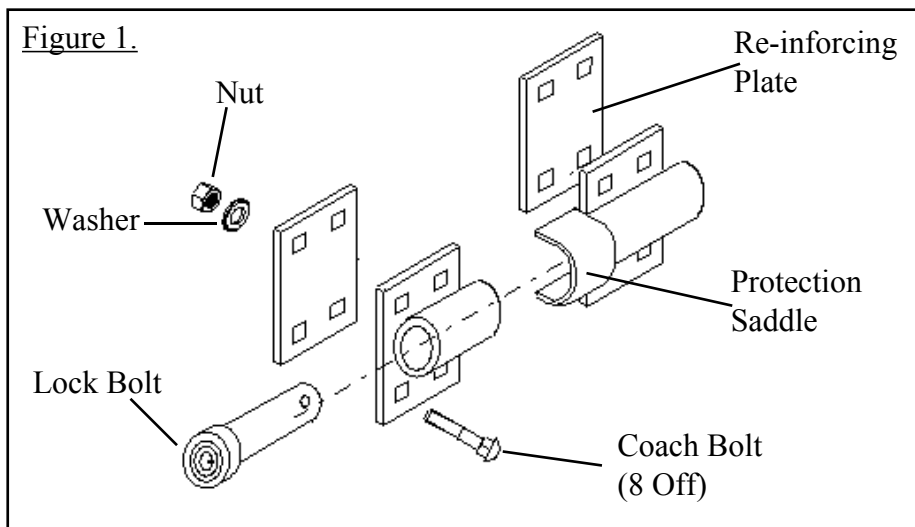

Note. When fitting to hinged doors the boss with the welded protection saddle should be fitted to whichever door opens first.

1. With lock bolt inserted and locked into both parts, hold up Double Door Lock and mark out hole positions onto doors.
2. Drill holes through doors a minimum of 11mm (7/16") diameter.
3. Attach both halves of the door lock to the door using the coach bolts provided, fitting the re-inforcing plates to the inside of the door. Washers and nuts should be positioned on the inside of the doors.

Tighten nuts with a 17mm spanner or socket.

## To Operate Lock.

**Unlocking:** Insert key, then rotate 1/4 turn anti-clockwise to unlock, then withdraw the lock bolt.

**Locking:** Insert lock bolt through both halves of lock brackets with lock in its un-locked position. Rotate key 1/4 turn clockwise to lock.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent.

However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

### **Lock Lubrication.**

IMPORTANT - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

### **Key Security. Enter your key number here:**

IMPORTANT - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place.** Should you lose your keys, replacements can only be obtained from Bulldog or your dealer.



GR01-1

## **BULLDOG SECURITY PRODUCTS LIMITED**

Units 1-4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH. Tel: 01952 728171 Fax: 01952 728117

Email: [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) Webpage: <http://www.bulldogsecure.com>